

4-Cycle Regular Oil

Customers Name _____

ITEM	RIDING DISTANCE IN MILES and KM												Daily Checks
Miles	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	
KM	805	1,609	2,414	3,219	4,023	4,828	5,633	6,437	7,242	8,047	8,851	9,656	
Engine Oil	R	R	R	R	R	R	R	R	R	R	R	R	I
Engine Oil Filter	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	
Gear Oil	R				R				R				
Valve Clearance	A				A				A				
Air Cleaner			C			R			C			R	
Fuel Filter			I			R			I			R	
Spark Plug			I/C/R			I/C/R			I/C/R			I/C/R	
Drive Belt					I					R			
ITEM	RIDING DISTANCE IN MILES and KM												Daily Checks
Miles	6,500	7,000	7,500	8,000	8,500	9,000	9,500	10,000	10,500	11,000	11,500	12,000	
KM	10,461	11,265	12,070	12,875	13,679	14,484	15,289	16,093	16,898	17,703	18,507	19,312	
Engine Oil	R	R	R	R	R	R	R	R	R	R	R	R	I
Engine Oil Filter	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	I/C/R	
Gear Oil	R				R				R				
Valve Clearance	A				A				A				
Air Cleaner			C			R			C			R	
Fuel Filter			I			R			I			R	
Spark Plug			I/C/R			I/C/R			I/C/R			I/C/R	
Drive Belt			I					R					

Updated 01/08/11

Your brakes along with all your screws and nuts should be inspected and tightened before each and every ride. Exhaust bolts and nuts should be inspected and tightened every 500 miles. I: Check, clean, lubricate, adjust or replace if necessary A: Adjust C: Clean R: Replace T: Tighten